

 
 
 
**Genie Z-30/20N (RJ) • Genie Z-33/18
Genie Z-34/22 • Genie Z-34/22N
Genie Z-40/23N (RJ)**

Z-30/20N (RJ) from SN 16279, from 16D-101, from 16F-17164
 Z-34/22N from SN 10370, from 15D-102, from 16F-12454
 Z-34/22 DC from SN 11813, from 16F-10689
 Z-33/18 DC from SN 15M-101
 Z-40/23N (RJ) from SN 15-2779, from 16N-3179

⚠ This Quick Reference Guide is intended for operators who are properly trained to safely operate the machine.

Getting Started:


Step 1: ⚠ Read the Operators Manual and Perform the pre-operation inspections and tests.		
Step 2 Be sure both battery packs are connected before operating the machine.	Step 3 Turn to platform position.	Step 4 Pull out Red Emergency Stop buttons.



Controls and Indicators:


Drive Enable

Light on indicates that the boom has moved just past either non-steer wheel and the drive function has been interrupted. To drive, hold the drive enable switch to either side and slowly move the drive control handle off center. Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the machine will travel.

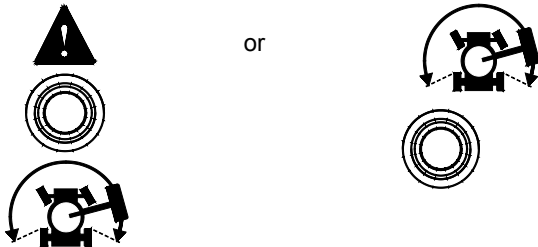

Platform Overload

 
Light flashing indicates the platform is overloaded and no functions will operate. Remove weight from the platform until the light goes off.



Machine Not Level Light Flashing: If the tilt alarm sounds when the platform is raised, the Not Level indicator light will come on and the drive function in one or both directions will not operate.

Follow the correct boom lowering sequence below based on the platform position. Do not rotate the boom while lowering.

Uphill Position

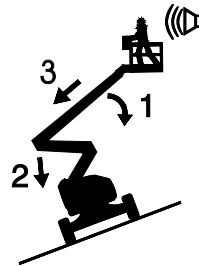

Downhill Position

