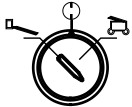
 



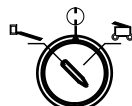
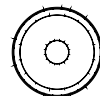

Z-34/22 IC from SN 9607, from 15D-102, from 16F-10689
Z-34/22 Bi-Energy from SN 11813, 16F-10689

⚠ This Quick Reference Guide is intended for operators who are properly trained to safely operate the machine.

Getting Started: Z-34/22 Bi-Energy


Step 1: ⚠ Read the Operators Manual and Perform the pre-operation inspections and tests.				
Step 2 Be sure both battery packs are connected before operating the machine.	Step 3 Turn to platform position.		Step 4 Pull out Red Emergency Stop buttons.	
			Step 5 Start Engine. If needed	

Getting Started: Z-34/22 IC

Step 1: ⚠ Read the Operators Manual and Perform the pre-operation inspections and tests.				
Step 2 Turn to platform position.		Step 3 Pull out Red Emergency Stop buttons.		Step 4 Start Engine.
				


Controls and Indicators:

Engine idle select

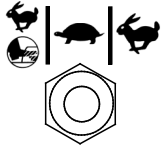


Rabbit & Foot Switch symbol: Foot switch activated high idle.
Turtle symbol: Low idle
Rabbit symbol: High idle
Bi-Energy models: quickest battery charging.

Drive Enable

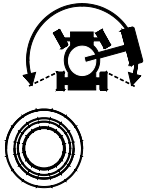

Light on indicates that the boom has moved just past either non-steer wheel and the drive function has been interrupted. To drive, hold the drive enable switch to either side and slowly move the drive control handle off center. Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the machine will travel.

 
Platform Overload



Bi-Energy Models:

Light flashing indicates the platform is overloaded and no functions will operate. Remove weight from the platform until the light goes off.

 Platform Overload



IC Models:


Light flashing indicates the platform is overloaded. The engine will stop and no functions will operate. Remove weight from the platform until the light goes off and then restart the engine.



Machine Not Level Light Flashing: If the tilt alarm sounds when the platform is raised, the Not Level indicator light will come on and the drive function in one or both directions will not operate.

Follow the correct boom lowering sequence below based on the platform position. Do not rotate the boom while lowering.

Uphill Position

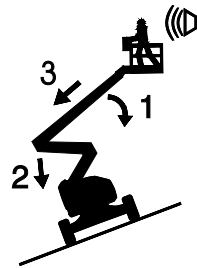

Downhill Position

