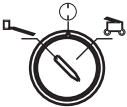 




**Z<sup>®</sup>-45/25 • Z<sup>®</sup>-45/25J • Z<sup>®</sup>-45 XC™ • Z<sup>®</sup>-51/30 • Z<sup>®</sup>-62/40**

Z-45/25 (J) from SN 15A-53481, from 15D-327, from 15B-4519, from 16M-5453, from 16N-55299  
 Z-45 XC from SN XCM-101  
 Z-51/30 from SN 16M-1518  
 Z-62/40 from SN 15A-101, from SN 16D-101, from Z62H-3000, from SN 16M-101, from Z6216N-1087




**⚠** This Quick Reference Guide is intended for operators who are properly trained to safely operate the machine.

**Getting Started:**

|   |   |   |   |
|---|---|---|---|
| <b>Step 1: ⚠ Read the Operators Manual and Perform the pre-operation inspections and tests.</b> |   |   |   |
| <b>Step 2</b><br>Turn to platform position.   |  | <b>Step 3</b><br>Pull out Red Emergency Stop buttons. |  |
|   |   | <b>Step 4</b><br>Start Engine.                        |  |





**Controls and Indicators:**

**Drive Enable**



Light on indicates that the boom has moved just past either non-steer wheel and the drive function has been interrupted. To drive, hold the drive enable switch to either side and slowly move the drive control handle off center. Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the machine will travel.

**Engine idle select**



**Turtle symbol:** Foot switch activated low idle.  
**Rabbit symbol:** Foot switch activated high idle.

**Platform Overload**

Light flashing indicates the platform is overloaded. The engine will stop and no functions will operate.  
 Remove weight from the platform until the light goes off and then restart the engine.

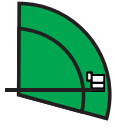 

**Drive Select**

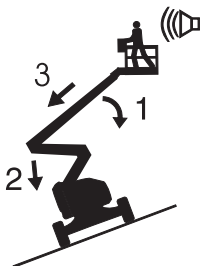
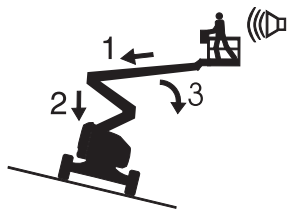
**Machine on incline symbol:** Low range operation for inclines.  
**Machine on level surface symbol:** High range operation for maximum drive speed.

**Platform Capacity Selection**

Range of motion is controlled automatically based on platform load.

|  |   |
|--|---|
| <b>Unrestricted</b>  | <b>Restricted</b>   |
|  |  |

**Machine Not Level Light Flashing:** If the tilt alarm sounds when the platform is raised, the Not Level indicator light will come on and the drive function in one or both directions will not operate.  
 Follow the correct boom lowering sequence below based on the platform position. Do not rotate the boom while lowering.

|  |   |
|--|---|
| <b>Uphill Position</b>   | <b>Downhill Position</b>  |
|  |  |