 
 



Z-80/60 from SN 5306

**!** This Quick Reference Guide is intended for operators who are properly trained to safely operate the machine.

**Getting Started:**

 
<b>Step 1: <b>!</b> Read the Operators Manual and Perform the pre-operation inspections and tests.</b>			
<b>Step 2</b> Turn to platform position.		<b>Step 3</b> Pull out Red Emergency Stop buttons.	
		<b>Step 4</b> Start Engine.	

**Controls and Indicators:**

The Z-80/60 machines will have one of these two styles of graphics on the platform control panel.

**Steer Mode**

The indicator light next to the current steer mode will be on.




**Drive Enable**



Light on indicates that the boom has moved past a circle-end tire and the drive function has been interrupted. To drive, move the drive enable switch and slowly move the drive control handle off center. Use the color-coded direction arrows on the platform box and drive chassis to identify the direction the machine will travel.

**Engine idle select**

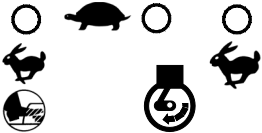

Rabbit and foot switch symbol light on indicates foot switch activated high idle is selected.  
Rabbit symbol light on indicates high idle is selected.  
Turtle symbol light on indicates low idle is selected.


**Platform Overload**



 Light flashing indicates the platform is overloaded. The engine will stop and no functions will operate. Remove weight from the platform until the light goes off and then restart the engine.

**Drive Select**


**Machine on incline symbol:** Low range operation for inclines.  
**Machine on level surface symbol:** High range operation for maximum drive speed.




**Operating Envelope Indicator Lights**

The operating envelope indicator lights will come on to notify the operator that a function has been interrupted and/or an action is required by the operator.

 
**Lower Primary Boom light flashing:** Lower the primary boom until the indicator light is off.



 **Platform Not Level light flashing:** The tilt alarm will be sounding when this light is flashing. The Platform Level toggle switch will only work in the direction that will level the platform. Level the platform until the indicator light is off.




**Machine Not Level Light Flashing:** If the tilt alarm sounds when the platform is raised, the Not Level indicator light will come on and the drive function in one or both directions will not operate.

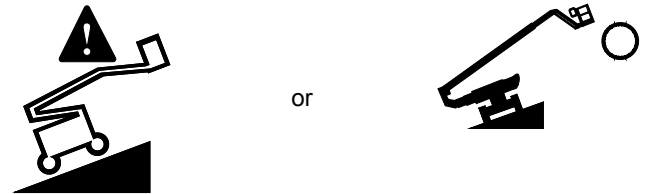

Follow the correct boom lowering sequence below based on the platform position. Do not rotate the boom while lowering.

**Uphill Position**

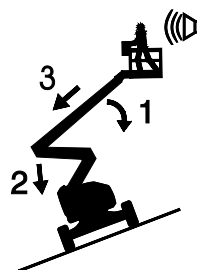

**Downhill Position**

